TRANSMISSION Final Drive, Differential - Manual Transmission 0B4 AWD (Sedan)

TRANSMISSION

Final Drive, Differential - Manual Transmission 0B4 AWD (Sedan)

39 FINAL DRIVE, DIFFERENTIAL

DESCRIPTION AND OPERATION

SHAFT SEALS ON TRANSMISSION OVERVIEW

The shaft seals -A- and -B- can only be replaced after the transmission has been removed. Refer to **Removal** and **Installation**.

The shaft seals -C-, -D- and -E- can be replaced with the transmission installed.

NOTE: When replacing the final drive cover -2-, the bearing pre-load for the tapered

roller bearing on the differential has to be adjusted. Refer to <u>FINAL DRIVE</u>

COVER.

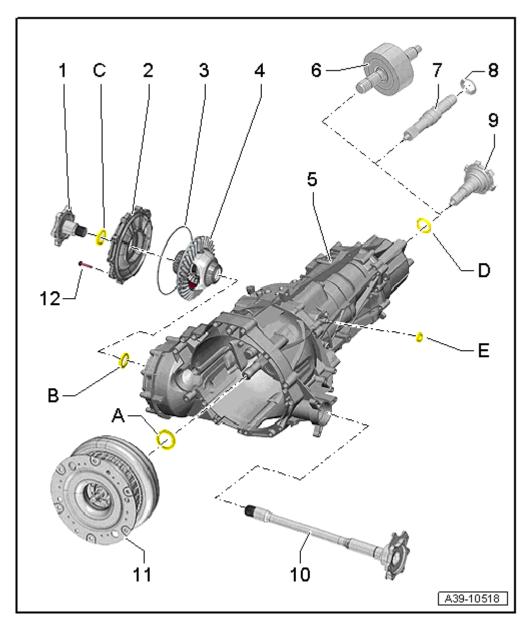


Fig. 1: Identifying Shaft Seals On Transmission Overview Courtesy of AUDI OF AMERICA, LLC

- 1. A Shaft Seal
 - For the input shaft
 - Removing and installing, refer to **Removal and Installation**.
- 2. B Shaft Seal
 - For the left flange shaft
 - Removing and installing, refer to **Removal and Installation**.
- 3. C Shaft Seal
 - For the right flange shaft

TRANSMISSION Final Drive, Differential - Manual Transmission 0B4 AWD (Sedan)

- Removing and installing, refer to **RIGHT FLANGE SHAFT SEAL**
- 4. D Shaft Seal
 - For the rear flange shaft or transmission output shaft with splines
 - Refer to REAR FLANGE SHAFT SEAL ON THE TRANSMISSION
 - Refer to <u>TRANSMISSION OUTPUT SHAFT SEAL</u>, <u>VEHICLES WITHOUT VIBRATION</u> <u>DAMPER ON THE TRANSMISSION OUTPUT SHAFT</u>
 - Refer to <u>TRANSMISSION OUTPUT SHAFT SEAL WITH SPLINES</u>, <u>REMOVING</u> <u>VEHICLES WITH VIBRATION DAMPER ON THE TRANSMISSION OUTPUT SHAFT</u>
- 5. E Shaft Seal
 - For the gearshift shaft
 - Refer to **SELECTOR SHAFT SEAL, TRANSMISSION INSTALLED**
- 6. 1 Right Flange Shaft
 - Removing and installing, refer to **RIGHT FLANGE SHAFT SEAL**
- 7. 2 Final Drive Cover
 - Removing and installing, refer to **FINAL DRIVE COVER**
- 8. 3 O-ring
 - On the cover for the final drive
 - Removing and installing, refer to **FINAL DRIVE COVER**
- 9. 4 Differential
- 10. 5 Transmission
- 11. 6 Transmission Output Shaft with Splines
 - With vibration damper; allocation
 - Replace the shaft seal when replacing the transmission output shaft with splines -D-
- 12. 7 Transmission Output Shaft with Splines
 - Without vibration damper; allocation
 - Replace the shaft seal when replacing the transmission output shaft with splines -D-
- 13. 8 Dust Ring
 - Replace after removing
- 14. 9 Rear Flange Shaft
 - Removing and installing, refer to <u>REAR FLANGE SHAFT SEAL ON THE TRANSMISSION</u>
- 15. 10 Left Flange Shaft
 - Removing and installing, refer to **Removal and Installation**
- 16. 11 Clutch Module
 - Removing and installing, refer to **Removal and Installation**
- 17. 12 Bolt
 - 24 Nm
 - Steel bolts (M8; 38 mm long)
 - Quantity: 10

TRANSMISSION Final Drive, Differential - Manual Transmission 0B4 AWD (Sedan)

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Component	Bolt Size	Nm
Final Drive Cover	M8	24
Drive Axle Heat Shield to Transmission	-	23

REMOVAL AND INSTALLATION

RIGHT FLANGE SHAFT SEAL

Special tools and workshop equipment required

- Needle Bearing Drift VW 295
- Puller T10037
- Thrust Piece T40163
- Used Oil Collecting and Extracting Device V.A.G 1782
- Sealing grease G 052 128 A1

REMOVING

- Transmission is installed.
- -- General repair instructions, refer to **REPAIR INFORMATION**.
- -- Remove right front wheel.
- -- Remove the rear noise insulation by loosening the fasteners -2- and -3-

TRANSMISSION Final Drive, Differential - Manual Transmission 0B4 AWD (Sedan)

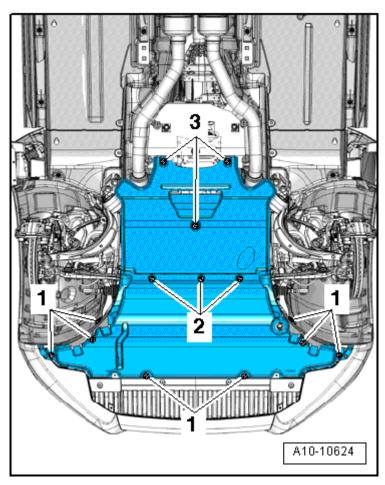


Fig. 2: Identifying Noise Insulation Components Courtesy of AUDI OF AMERICA, LLC

-- If equipped, remove the noise insulation -1- in the right wheel housing.

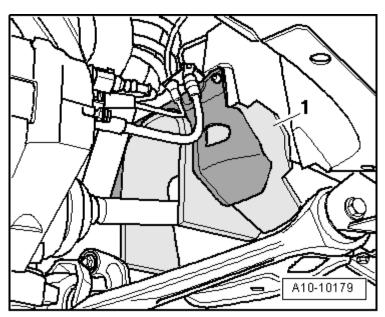


Fig. 3: Remove Right Drive Axle Cover Courtesy of AUDI OF AMERICA, LLC

-- Remove the bolts -arrows- and remove the heat shield from the right drive axle.

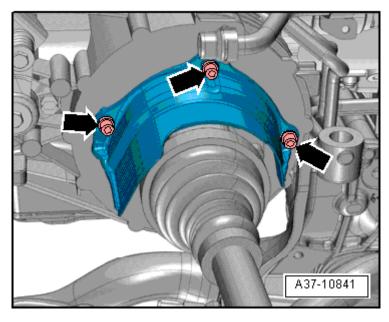


Fig. 4: Driveshaft Heat Shield - Tightening Specification Courtesy of AUDI OF AMERICA, LLC

-- Remove the right drive axle on the transmission and lay it aside. Refer to **Removal and Installation**.

Place the V.A.G 1782 under the transmission.

-- Remove the right flange shaft by installing the T10037 to the final drive cover -arrow-.