

## Air Bag(s) Arming and Disarming: Service and Repair Rear Side Airbags With Power Adjusted Seats, D

### Rear Side Airbags With Power Adjusted Seats, Deactivating And Reactivating

**NOTE:** Left and right side airbags can only be switched off together. A separate shut-off is not possible.

#### Deactivating

The deactivation procedure should only be done at the Client's written and signed request. See form.


**CAUTION:** Note safety measures when working with airbag.



- Obtain adhesive language label kit Part Number 4D0 010 043 J (two required per vehicle).
- For vehicles with coded radio unit, radio/navigation system (RNS) note coding; ask if necessary.
- Disconnect battery ground strap/cable and cover negative pole.

**CAUTION:** On vehicles equipped with Audi Telematics by OnStar(R), switch-off the emergency (I

- Fold armrest forward.

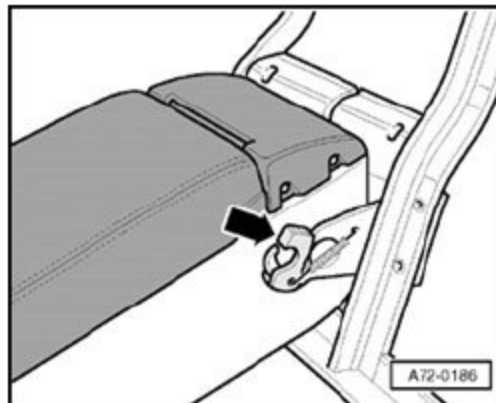

- Press lock bracket on both sides of armrest in direction of arrow and remove armrest

