

**CLUTCH RELEASE MECHANISM  
GEARBOX TYPES A, B, C, D, E**

Special Tools: MS 2700 Rail Trolley

**Removal** 5B-04-11

1. Split the tractor between the engine and the transmission, Part 3A.
2. Remove the two springs.
3. Slide the carrier and release bearing off the input housing.
4. Remove the locking wire and locking peg.
5. Remove the circlip.
6. Remove the shaft.
7. Remove the clutch release fork.
8. Press the release bearing off the carrier.

**Refitment**

9. Reverse procedures 1 to 8, except:
  - (a) Lightly lubricate the input shaft splines and the release bearing carrier bore, with special grease Mobilgrease Super.
  - (b) Ensure that the locking peg locates in the hole in the shaft.

