
WHEEL HUB

Overview

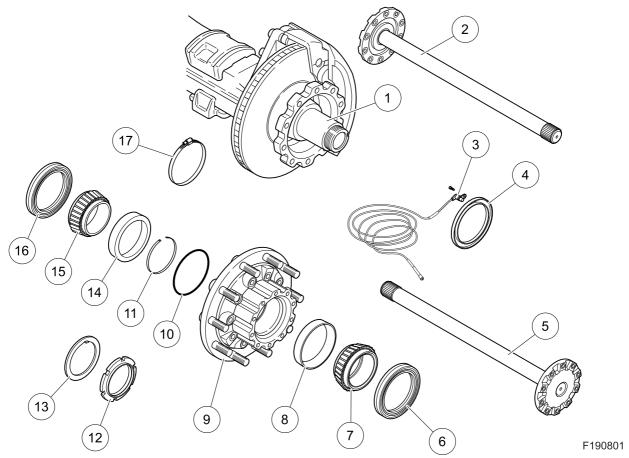

- (1) Axle tube
- (2) Axle shaft
- (3) ABS sensor
- (4) Holder for ABS sensor
- (5) Axle shaft
- (6) Outer rotary shaft seal
- (7) Outer tapered roller bearing with bearing inner race
- (8) Outer tapered roller bearing outer race
- (9) Wheel hub

- (10) Sealing ring
- (11) Retaining ring
- (12) Grooved nut
- (13) Thrust washer
- (14) Inner tapered roller bearing outer race
- (15) Inner tapered roller bearing with bearing inner race
- (16) ABS pulse wheel with rotary shaft seal
- (17) Hose clamp


F 19 2 – 11

REMOVING AND INSTALLING THE AXLE SHAFTS

Includes

- Jacking up/lowering vehicle, securing vehicle to prevent rolling away, Operator's Manual, Maintenance Manual
- Removing and fitting the road wheels, Operator's Manual, Maintenance Manual
- · Checking the oil level, topping up if necessary, Maintenance Manual

Overall view

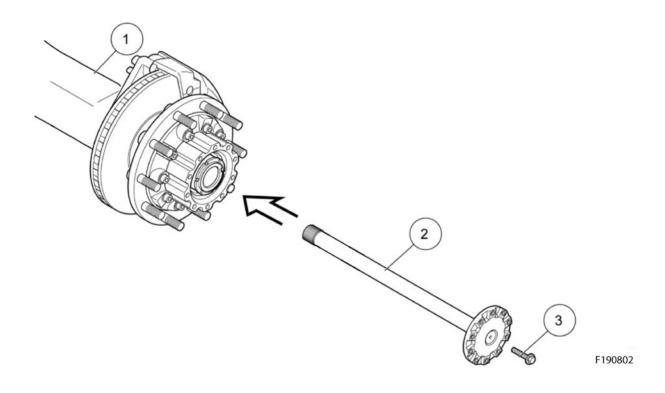

(1) Axle housing

(3) Mounting bolt

(2) Axle shaft

Technical data

Wheel nut		575 Nm
Axle shaft mounting bolt	M 16 x 1.5 - 10.9	360 Nm
Oil level checking and filler plug	M 24 x 1.5	70 Nm
Oil drain plug		
, 5		
Loosening torque, combination brake cyli	max. 35 Nm	

Service products

Important information



Note

Note the combination brake cylinder release torque when releasing the brake using the combination brake cylinder release device, see Technical data, page 13

Adjust the clearance when releasing the brake using the brake adjuster threaded spindle, see Technical data, page 13

F 19 2 – 13