

Fig 85.

T011910-1-C1



## Operators Seat Base

### Removal and Replacement

For this procedure, refer to **Section 3 - Routine Maintenance**.



Page left intentionally blank

# Engine Cover

## Removal and Replacement

### Removal

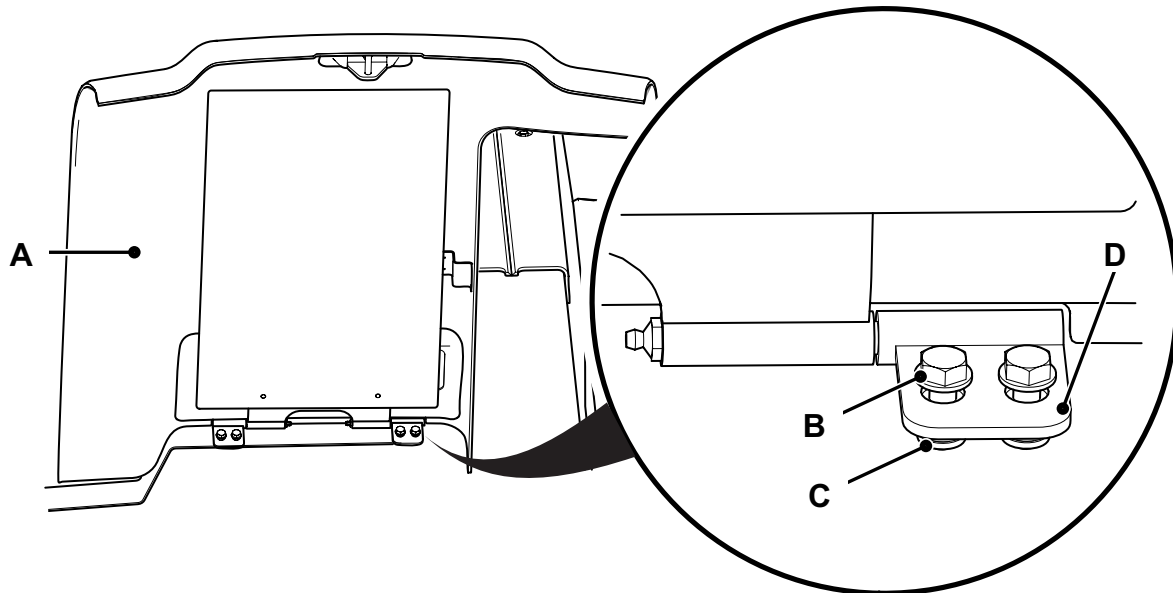


Fig 86.

C090270

### WARNING

The engine has exposed rotating parts. Switch OFF the engine before working in the engine compartment. Do not use the machine with the engine cover open.

5-2-6-5

### CAUTION

Hot oil and engine components can burn you. Make sure the engine is cool before doing this job.

2-3-3-2

- 1 Make the machine safe with the boom lowered. Stop the engine. Refer to **Section 3 - Routine Maintenance**.
- 2 Open the engine cover. Refer to **Section 3 - Routine Maintenance**.

- 3 Support the engine cover A.
- 4 Remove bolts B and nuts C from the hinges D at both sides of the engine cover A.
- 5 Remove the engine cover from the machine.

### Replacement

Replacement is the opposite of the removal procedure.



## Section B - Body and Framework Engine Cover

Removal and Replacement

---

Page left intentionally blank