

UNDERCARRIAGE / Front Idler


REMOVE AND INSTALL FRONT IDLER

Removal


Before removing the front idler, the tracks must be removed first. For removal and installation of the tracks, refer to "Remove and Install Tracks" section. In this section, the procedure starts on the premise that the tracks has already been removed.

CAUTION: Front idler weight:
84 kg (185 lb)

1. Slide the front idler forward, using a pry bar.
2. Attach the front idler to a hoist, then remove the front idler (1) from track frame (3).

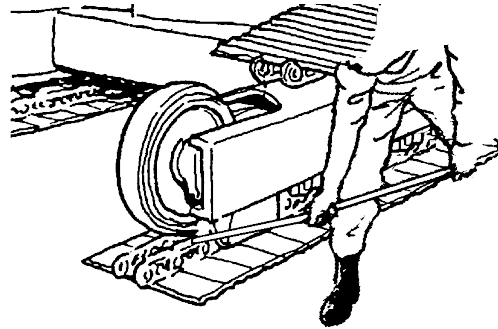


W110-03-05-001

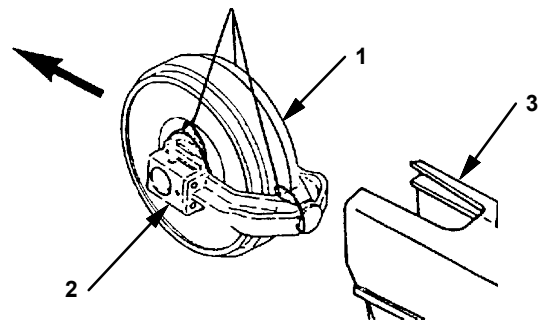

W110-03-05-002


3. To keep front idler (1) for a time, place it on blocks as shown.

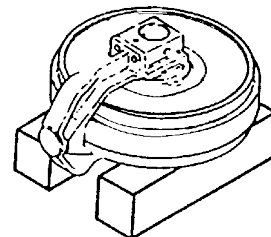

W105-03-05-003

Installation

1. Attach front idler (1) to a hoist, then install it to track frame (3).
Apply a film of grease to the sliding surface between track frame (3) and bearing (2).

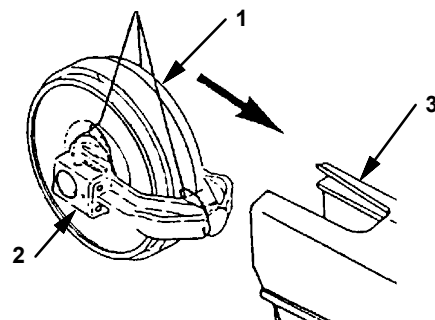

W110-03-05-003