


## FRONT ATTACHMENT / Front Attachment

### HYDRAULIC CIRCUIT PRESSURE RELEASE PROCEDURE


 **NOTE:** Do not start the engine. Operate pilot pump with the power from battery to deliver pilot pressure to the spool of control valve.

1. Push pilot control shut-off lever (1) forward (UNLOCK position).
2. Pull engine stop knob (2) fully out and secure it using special tool (ST 7334).

**IMPORTANT: Battery will deplete. Be sure to operate key switch for short period.**

3. Turn the key switch to START position and operate the lever for releasing pressure from hydraulic circuit 4 to 5 times.

Releasing Circuit	Operating Lever
Boom/Bucket	Right Control Lever (5)
Arm	Left Control Lever (4)
*Positioning/ Auxiliary	Attachment Pedal (3)
*Stabilizer/Blade	Stabilizer/Blade Lever (6)

 **NOTE:** \*: Optional

4. Push engine stop knob (2) in.

