

REMOVE AND INSTALL THERMOSTAT HOUSING/WATER MANIFOLD

⚠ CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns. Do not drain coolant until the coolant temperature is below operating temperature. Always loosen cooling system filler cap, radiator cap, or drain valve slowly to relieve pressure.




1. Drain coolant.
2. Disconnect hoses.
3. Remove housing-to-cylinder head cap screws.
4. Remove housing (A) from cylinder head.



S11,2025,EZ -19-21SEP95

5. Remove housing-to-water pump tube (A), Option Code 2102. Remove O-rings (B) from housing and water pump.

6. Remove thermostat cover and thermostat(s).

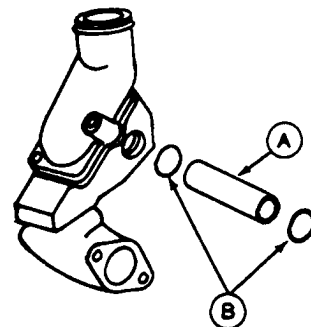

S11,2025,FA -19-13JUL95