


Alternator Removal

Disconnect ground straps of battery.

Disconnect cables from alternator.

Remove alternator per instructions in machine technical manual.

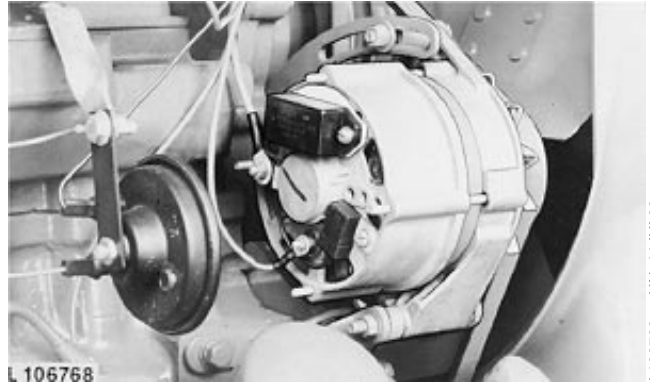

Alternator Removal

RG, RG34710, 2147 -19-15MAR97-1/1

Removing Brush Holder with Regulator

NOTE: Before dismantling alternator, first remove brush holder with regulator so carbon brushes will not break during disassembly.



Remove Brush Holder with Regulator

RG, RG34710, 2148 -19-15MAR97-1/1

30
10
5