


MODEL 168.006 /007 /008 /009 /031 /032 /033 /035 /109 /131 /132 /133 /135

Shown on model 168 up to 28.2.01

- 6d Brake lines
- 8a Hexagon socket bolt
- 8b Intermediate bracket
- 8c Rubber mount

- A7/3 Traction systems hydraulic unit
- A7/3x1 Traction systems hydraulic unit connector
- B34 ESP brake pressure sensor
- B34x1 ESP brake pressure sensor connector

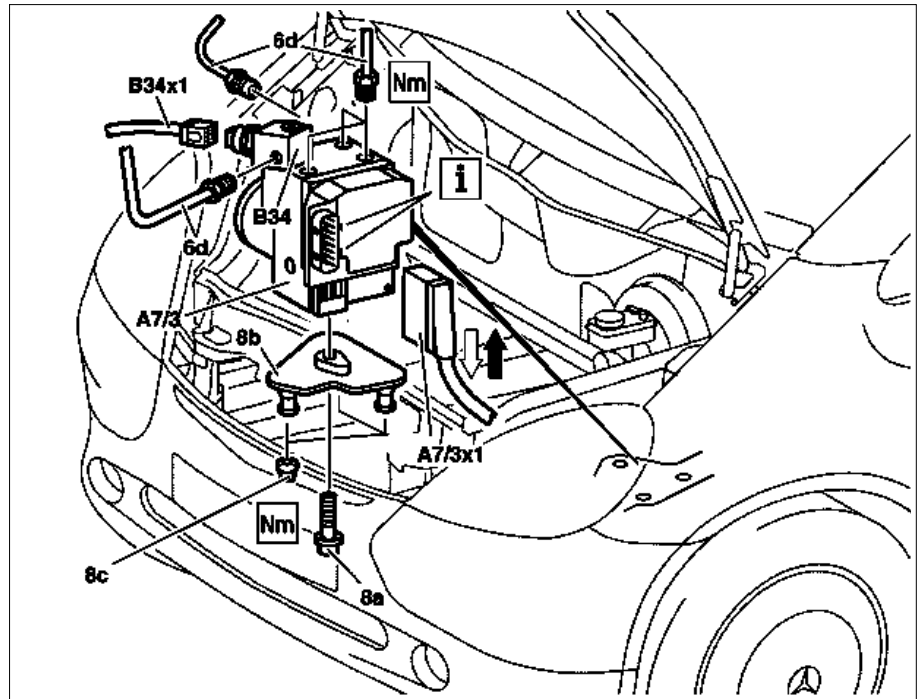


P42.30-0262-06

Shown on model 168 as of 1.3.01


 
 
- 6d Brake lines
- 8a Hexagon socket bolt
- 8b Intermediate bracket
- 8c Rubber mount

- A7/3 Traction systems hydraulic unit
- A7/3x1 Traction systems hydraulic unit connector
- B34/1 ESP pressure sensor 1
- B34/2 ESP pressure sensor 2

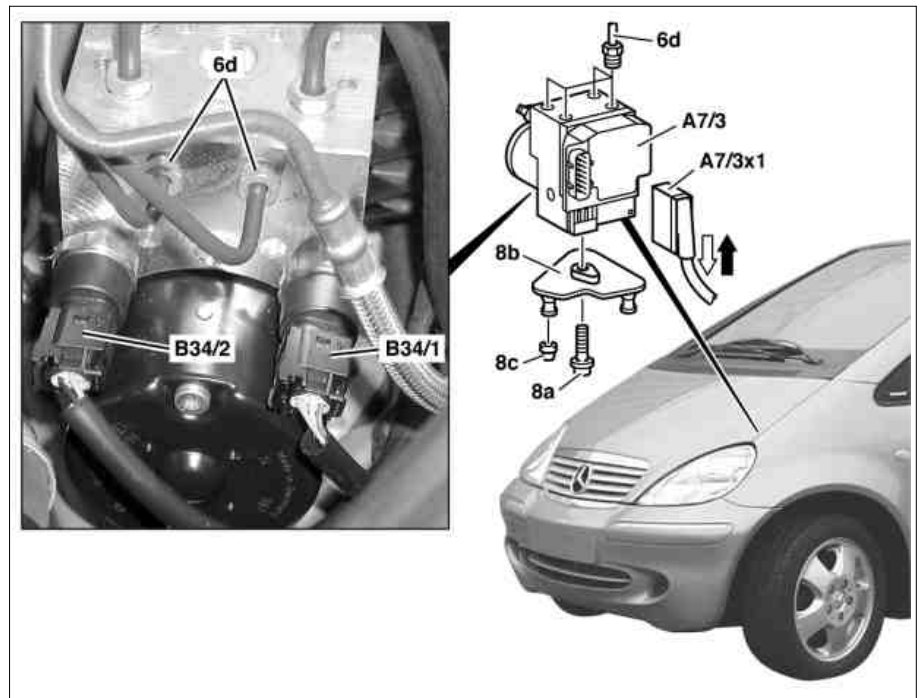

P42.40-2012-06

	<p>Removing, installing</p>		
<p>⚠ Danger!</p>	<p>Risk of poisoning from swallowing brake fluid. Risk of injury from skin and eye contact with brake fluid</p>	<p>Pour brake fluid only into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.</p>	<p>AS42.50-Z-0001-01A</p>
<p>1</p>	<p>Remove washer fluid reservoir</p>	<p>i Turn locking lever and move washer fluid reservoir to one side with lines connected.</p>	
<p>2.1</p>	<p>Unplug connector (B34x1)</p>	<p>i Model 168 up to 28.2.01</p>	
<p>2.2</p>	<p>Unplug connector (B34x1, B34x2)</p>	<p>i Model 168 as of 1.3.01</p>	
<p>3</p>	<p>Unplug traction systems hydraulic unit connector (A7/3x1)</p>	<p>Separate and unlock (white arrow) connectors. i Installation: Insert plug into guides, establish connections and lock (black arrow).</p>	


4	Detach brake lines (6d) from traction systems hydraulic unit (A7/3)	<i>i</i> Location of brake lines on traction systems hydraulic unit  Seal off brake lines (6d) using suitable plugs.   Nm	*129589009105 *000589760300 *BA42.10-P-1004-04C
5	Pull traction systems hydraulic unit (A7/3) out of rubber mounts (8c)	<i>i</i> Check rubber mounts (8c) for wear and replace if necessary.	
6	Detach intermediate bracket (8b) from traction systems hydraulic unit (A7/3)	Nm <i>i</i> Only if necessary.	*BA42.30-P-1001-03A
7	Install in the reverse order		
8	Bleed brake system		AR42.10-P-0010GC
9	Check brake system for leaks		AR42.10-P-0100-01GC
10	Check brake fluid level and correct if necessary		

Nm Brake lines, brake hoses


Number	Designation		Model 168.007/ 008/031/ 033	Model 168.006/ 009/131	Model 168.032/ 035	Model 168.109/ 132/133/ 135
BA42.10-P-1004-04C	Brake line to ABS hydraulic unit	Nm	14	14	14	14

Nm Hydraulic unit

Number	Designation		Model 168.006/ 009/109/ 131/132/ 133/135	Model 168.007/ 008/031/ 032/033/ 035
BA42.30-P-1001-03A	Bolt, intermediate bracket to ABS hydraulic unit	Nm	30	30

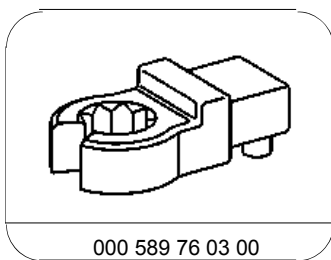

Box wrench

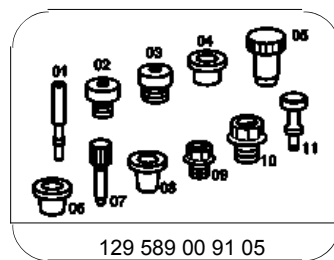

Set of plugs