## T197921A-UN: Pattern Select Switch

## LEGEND:

1 - Pin 1 2 - Pin 2

3 - Pin 3

Remove switch from harness. Use multimeter to check for continuity.

Pins 2 and 3 in the H position.

Pins 1 and 2 in the ISO position.

Is continuity measured?


**Result:** 

YES: Switch is OK.

NO: Switch has failed. Replace.

## 1N Self Leveling Switch (S38) Check

## Action:

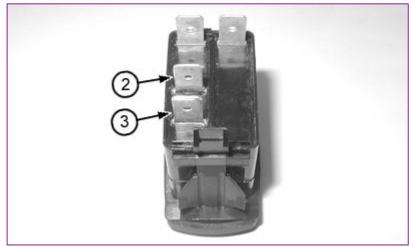

T197922A-UN: Self Leveling Switch

LEGEND:

2 - Pin 2 3 - Pin 3

Remove switch from harness. Use multimeter to check for continuity.

Pins 2 and 3 in the ON position.

Is continuity measured?